



Contour End Base (CEB) Assembly Instructions

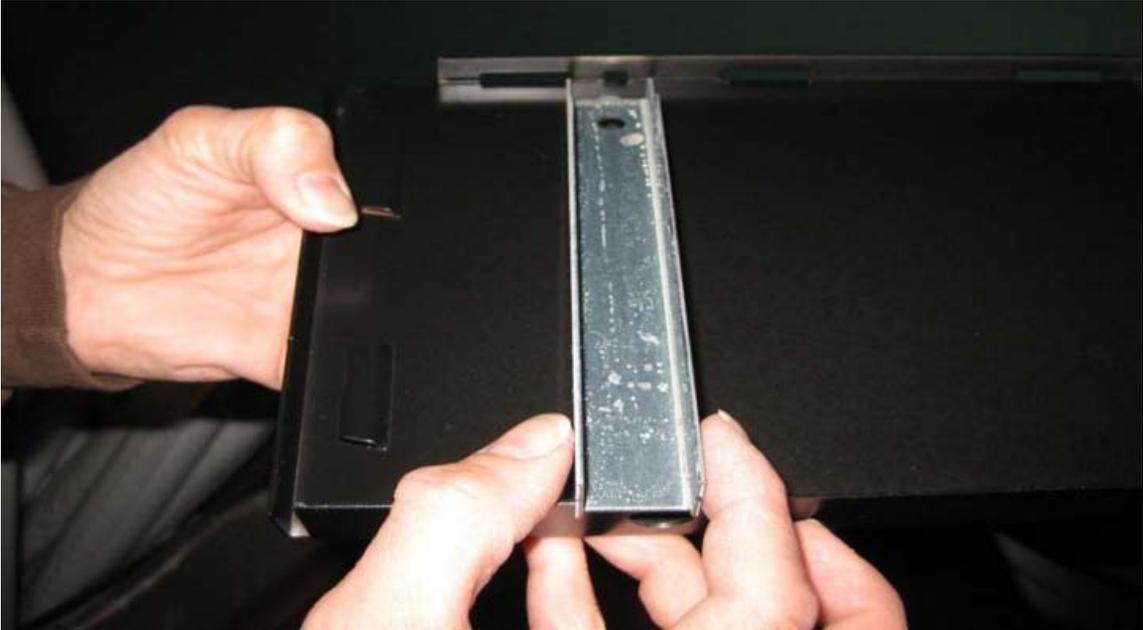

Insert tab on bar into the small hole on the lip.

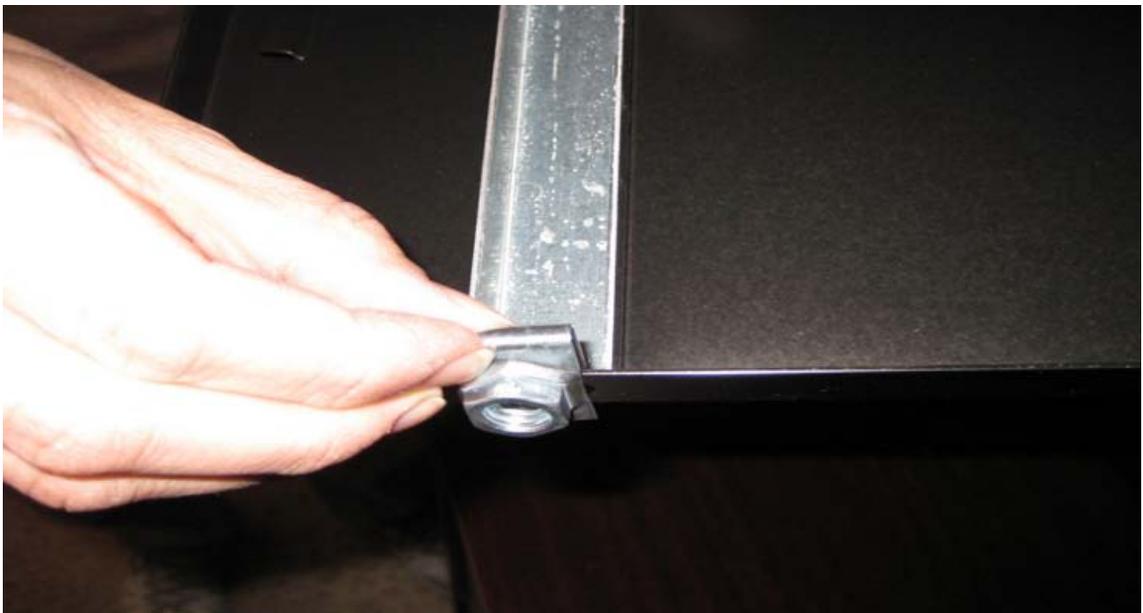

Slip nut over lip and align with hole.

Contour End Base (CEB) Assembly Instructions



Screw leveler into nut.
This will hold in place (though some movement may be present).



Once all the levelers are installed.
Slide back plate into place with flanges pointing up.

Contour End Base (CEB) Assembly Instructions



Slide front plate into place.



Place base deck over box and flip on its back.

Center black box on the base deck.

Insure this portion of the back of black box is over the back lip of base deck.

Use one self-tapping screw to secure it to the base deck.

Contour End Base (CEB) Assembly Instructions



Place clips over brackets as shown on both sides.



Screw into place using self tapping screws included.

Contour End Base (CEB) Assembly Instructions



Insert from thumb screw into openings on either side of the back. Remove thumb screw and put through opening on the gondola and screw in tight to attach.

Assembly complete!