



unlocked

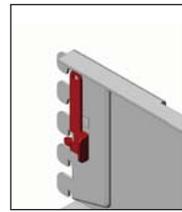

locked

**1** Seat the hooks of the End Bottom Arm into an End Standard. Note, the smooth sides of both components are in the same direction. Engage the lock by tapping it with a mallet. Repeat installation with the Center Standard and Center Bottom Arm. Note, the Center Bottom Arms have a spring loaded lock and a clicking noise shall be heard when properly installed.

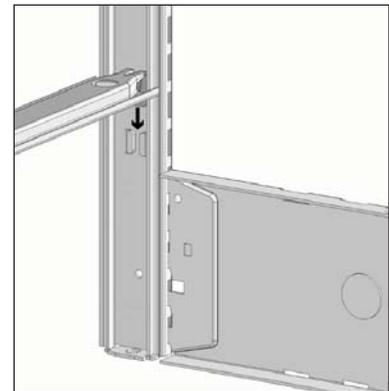



**2** Install the Cross Tie by sliding it into the bottom shear form(s) of the upright. You may need to tap directly above the tab with a rubber mallet to properly seat it. See illustrations above.






**3** Install the Slatwall Tie Bar into the shear form as shown. You may need to tap directly above the tab with a rubber mallet to properly seat it. See illustrations above.





**4** The bottom and shorter piece of Slatwall will be installed as illustrated above. With the beveled edge facing outward, place the side of the slatwall into the groove of the upright. Next, simultaneously push the standard outward while twisting the other other standard so the slatwall pops in. Slide down.

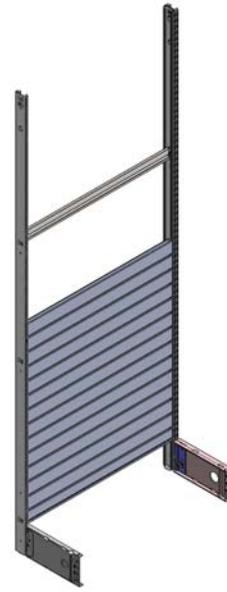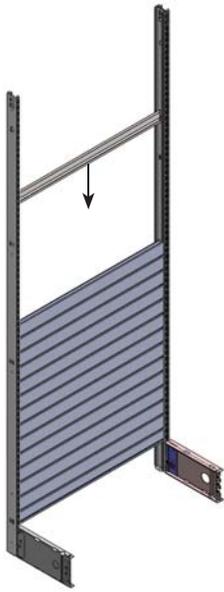



5 Install the next Slatwall Tie Bar. Same as step 3.

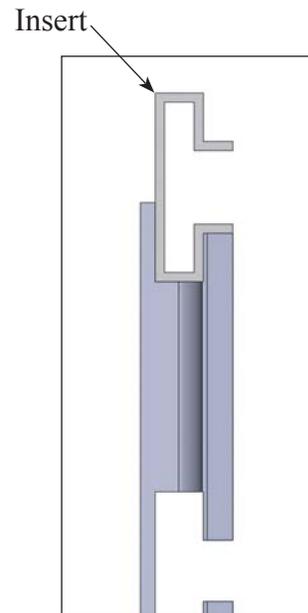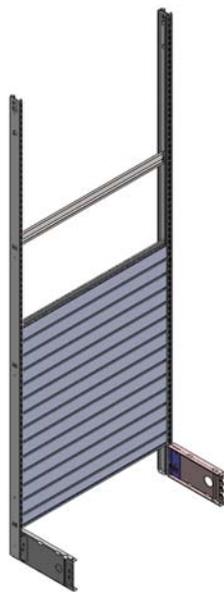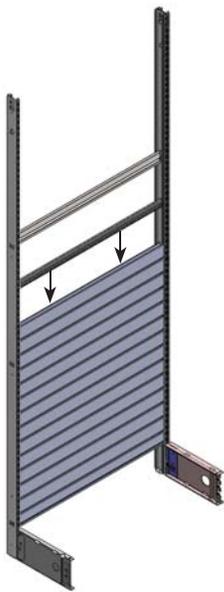

6 Place a piece of Slatwall insert in the top groove of the Bottom Slatwall. See figures above.

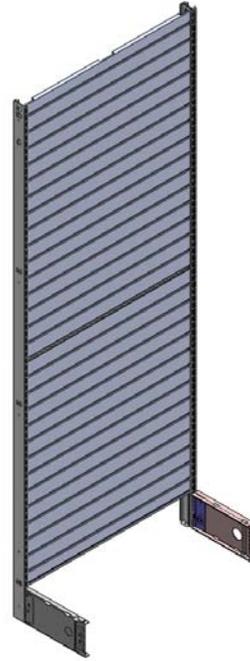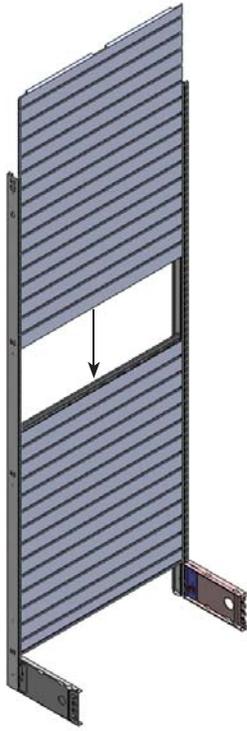

**7** The top piece of Slatwall should be installed the same way as the bottom piece. See step 4. Avoid hitting the ceiling.

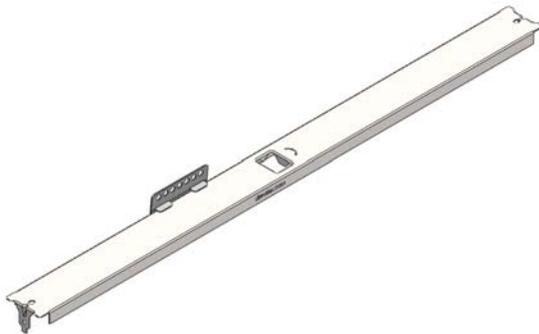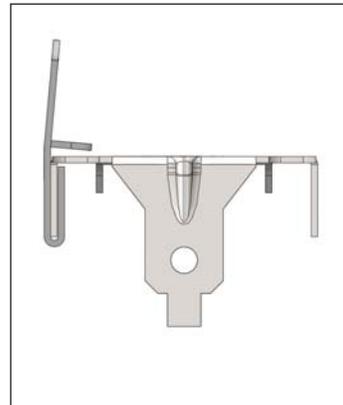



X- Painters Tape





**8** Determine the location of the wall stud and mark with painters tape at the top of the gondola. Slide the Top Cap Anchor Bracket as shown above. A rubber mallet may be needed to slide the bracket to the approximate location of the wall stud.




**9** Install the Top Cap into the the top shear form as shown. You may need to tap directly above the tab with a rubber mallet to properly seat it. See illustrations above. Secure the Top Cap Anchor to Stud.

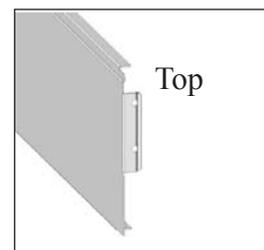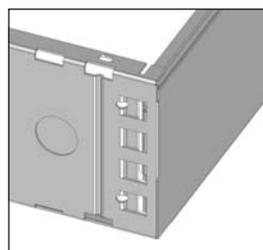

**10** Align the Kick Plate tabs with the fingers of the bottom arms. Tap kick plate with your hand or a mallet to seat the tabs securely into the fingers of the bottom arm. Repeat for Center bottom Arm.

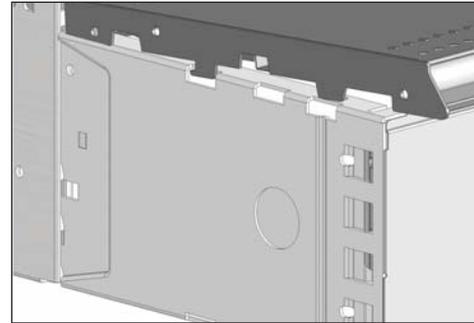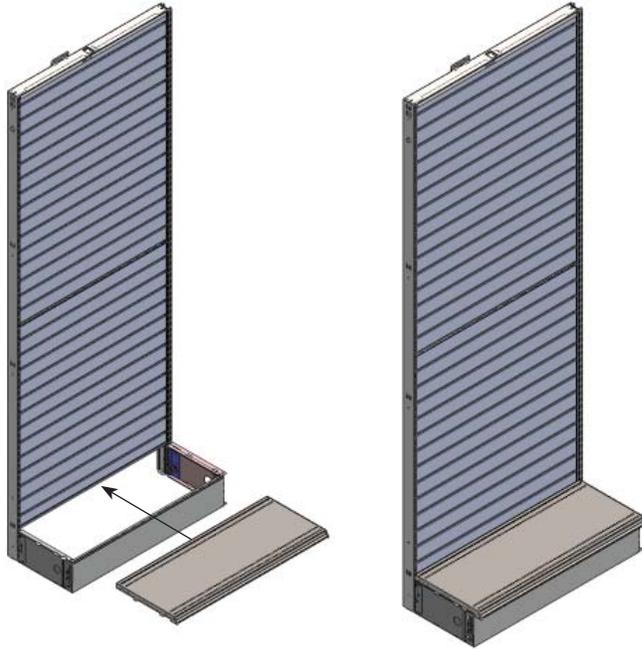

**11** Tip the Deck up slightly and slide it into the slots of the bottom arms. When properly installed, the deck should not tip forward when you push on the front of the deck.

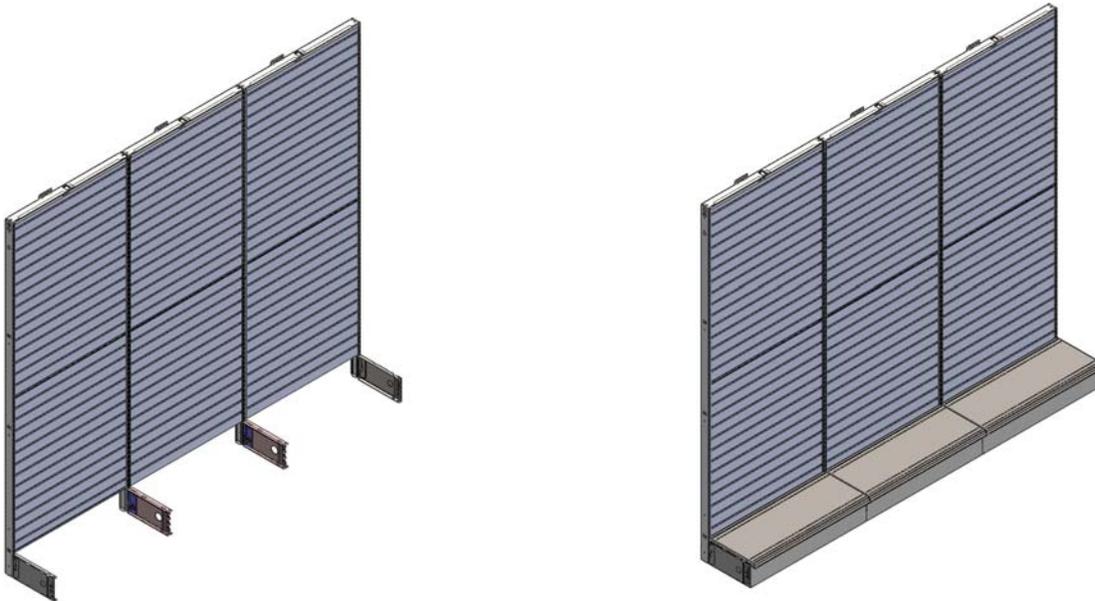

**12** Complete the rest of the run. Notice (2) End Standards and End Bottom Arms at the ends while the middle of the run contains Center Standards and Center Bottom Arms.